



Curvas de funcionamiento


**Motor F 416 Ex, F 416-1 Ex
o F 416-2 Ex**

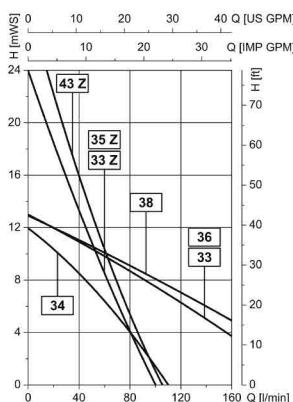


Motor FEM 4070

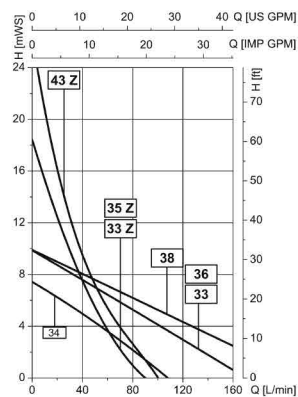

Motor F 457 o F 457 EL

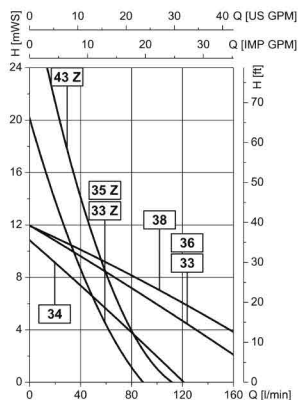

**Motor F 458, F 458 EL,
F 460 Ex o F 460 Ex EL**

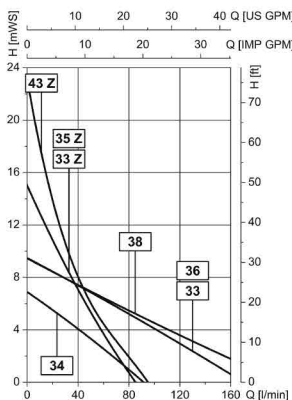

Motor F 458-1 o F 460-1 Ex

